



## STRINGING INSTRUCTIONS

Model: TX125A-118

Pattern: 16M x 19X Length: TBD (2PO)

## M' String


Start M's at head. M's skip 7H, 9H, 7T, 9T. No share holes.

## X' String

Start X's at 7H. Bottom X: 7T.

## Tie Off

M's at 8H. X's at 10H & 9T.

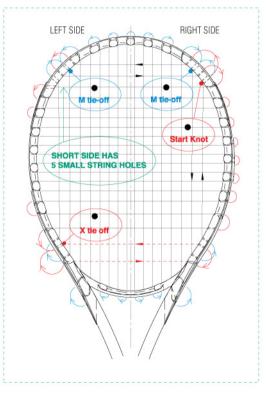

PRINCE requires X's to be installed from the top on all racquets. Installing crosses starting from the bottom will void the warranty.